Rev.	1	2 1		Z	-	DO
Rev. Date by	1.30.10	1.14.10		STALI		UBLE
by	wkz	wkz		Α		
Description	1.30.10 wkz Safety Labels replace arrows & change revision block Drawn wkz Copywrite: 2010	2  11.14.10 wkz   Locking Pins & Note		INSTALLATION DRAWING	;;;);;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;	DOUBLE POST HINGED BOLLARD THIRD ANGLE (A)
Check	evision block Draw	Desi	Acti	Do not scale from drawing		THIRD ANGLE   PROJECTION
∢ed wi	'n	gn wi	on b	drawing		$\mathbb{A}$
Checked  wkz Dwg. Size: Letter Drawing	cz Copywrite: 2010	Design   wkz   Dwg. Scale: nts   Assemb	y Bus: 1.877.7	Free		
Drawing Date:12.10.10 Sheet: 1 of 2	84 Pounds DHB-	₹	Action by Bus: 1.877.727.7347 Fax: 1.800.814.7194	P.O. Box 201, Geneva, IL. 60134	_	LatticGliard

### **DOUBLE POST HINGED BOLLARD INSTALLATION INSTRUCTIONS**

- 1. Verify that all Double Post Hinged Bollard parts are in the shipment package as shown on the "Bill of Material".
- 2. Provide Double Post Hinged Bollard Anchor System (see included Anchor System Drawings—CPAS12) at a location to suit your specific needs.
- 3. Install DHB Base true and level on Anchor System using the flat washers and hex nuts included in your Anchor System Kit. Use S.S. shims to level if needed. Torque hex nuts to Minimum 100 ft—lbs for Anchor Systems CPAS12.
- 4. Install DHB Posts (Item 1) to DHB Base (Item 2) using Hinge Bolts (Item 5) and Hex Nuts (Item 6) as shown. Tack Weld Hex Nuts to Hinge Bolts or Chisel Hinge Bolt Threads such that Hex Nuts cannot be easily removed.
- 5. Install Locking Pin thru UP Position Bollard Posts, and install Padlocks as needed.
- 6. Install the four Labels at the locations shown.
- 7. Install Post Adjusting Screw (Item 9) in threaded hole in center of DHB Base (Item 2). Adjust Screw to keep DHB Posts (Item 1) from rocking while in upright Padlocked postion.
- 8. Check the functional operation of the Hinged Bollard Posts.
- 9 Note: S.S. shims, tools, grease, and padlocks are not provided.
- 10. LEVELING BOLT INSTRUCTIONS:
  - A. START 1/2" (13) X 1 3/4" 18-8 STAINLESS STEEL HEX IN CENTER HOLE OF BASE PLATE. (THREADS HAVE BEEN LEFT PAINTED FOR A TIGHT FIT). TURN BOLT SLIGHTLY THROUGH BASE.
  - B. INSTALL POSTS IN LOCKING UPRIGHT POSITION. BEGIN RAISING LEVELING BOLT WITH WRENCH UNTIL CONTACT IS MADE WITH POSTS. RESULTS WILL BE A STABLE SET OF POSTS.

# <u>Design Criteria</u>

The Hinged Bollard is designed to fail at a static (or equivalent impact load) load of approximately 1,200 pounds horizontal force applied at 27 inches above grade. The Hinged Bollard System should fail in one of the following modes.

- 1. The Hinge Bolt connection will shear and the Bollard will rotate to grade.
- 2. The Anchor System will fail and the Bollard Base will rotate.
- 3. The Earth will yield and the foundation will tip in rotation.

If installation conforms to the specifications and these drawings, TrafficGuard ® expects the failure to occur in the sequence shown with the Hinge Bolt connection shear as the governing failure.

#### General Specifications and Notes for all Parts and Weldments DOUB S 1. All Steel Work shall conform to the AISC "Specification for the Design, Fabrication and Erection of Structural Steel for Buildings" — Latest Edition unless noted on the dwg. 2. All Welding shall be performed by qualified welders and shall conform to the American Welding Society ANSI/AWS D1.1— Latest Edition of the Structural Welding Code—Steel. 3. All Material shall be new and shall be as noted on the drawing and/or in the Bill of Material. SS indicates Stainless Steel and HDG indicates Hot Dip Galvanized. .30.10 4. All Painting Work shall conform to the manufacturer's specification and installation instructions and the SSPC (Stelle Stuctures Painting Council) and as noted on the dwg. 5. All hole center dimensions shall have a tolerance of 1/16 inch± and other dimensions shall have a tolerance of 1/8 inch± unless noted on the drawing. $\Box$ ¥kz wkz 6. All work shall be packaged and shipped per specific instructions by PARS Direct. ℧ Safety Labels replace arrows SO BIL MATERIAL DR. ITEM PART **DESCRIPTION** AWING DHBF1 DHB POST HING DHBF2 DHB BASE & Note 1004 SINGLE LOCKING PIN SS316 4 2004 DOUBLE LOCKING PIN SS316 ш ø3/4" x 8" HEX HEAD HINGE BOLT - 18-8 SS 6 0006 ø3/4" HEX NUT - 18-8 SS 2 SAFETY LABEL 3" x 12" 0107 Description $\Box$ THREE INCH CLEARANCE LABEL 0101 P LEVELING BOLT Ø1/2" x 1 1/2" HEX HEAD 18-8 SS 0051 ۶۰ LARD change Apply Safety Label to side of both Bollard revision THIRD ANGLE PROJECTION sections at 1" below hole as shown. block scale INSTALL PADLOCKS from (provided by owner) HERE Design Drawn Copywrite: SPECIFY ITEM 3 OR ITEM 4 WHEN ORDERING APPLY A THIN COAT OF MULTI-PURPOSE ONE LOCKING ONLY INCLUDED WITH BOLLARD GREASE TO HINGE 010 **BOLTS** nts Date: 12.10.10 | Sheet: WHEN IN DOWN POSITION OF ANCHOR SYSTEM PART LOCKING PIN AND PADLOCKS WILL BE STORED HERE SYSTEM WHEN DHB POSTS (ITEM 1) ARE IN DOWN POSITION **Q** ( 601 .719 This Drawing shall not be used nor reproduced except when authorized in writing by TrafficGuard.

### LEVELING BOLT INSTRUCTIONS:

- 1. START 1/2" (13) X 1 3/4" 18-8 STAINLESS STEEL HEX IN CENTER HOLE OF BASE PLATE. (THREADS HAVE BEEN LEFT PAINTED FOR A TIGHT FIT)
- 2. TURN BOLT SLIGHTLY THROUGH BASE.
- 3. INSTALL POSTS AND LOCKING UPRIGHT POSITION.
- 4. BEGIN RAISING LEVELING BOLT WITH WRENCH UNTIL CONTACT IS MADE WITH POSTS. RESULTS WILL BE A STABLE SET OF POSTS.

## TrafficGuard

"Authorities on Limiting Access"

P.O. Box 201, Geneva, IL. 60134 877-727-7347 www.trafficguard.net





